


# SPDIF BOARD INSTALLATION (IN50se-80se-100se + PR100se-PR200200se)

Information and technical support : 0033 2 33 48 44 06


\*\*\*\*\*

1- PLACE 4 DIL INTER AS SHOWN ABOVE

SE MODELS :

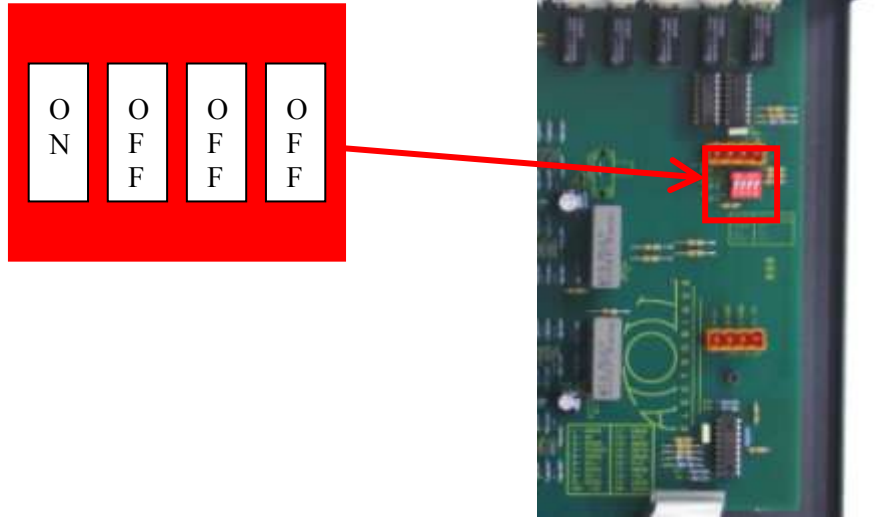

IN200/PR300 :

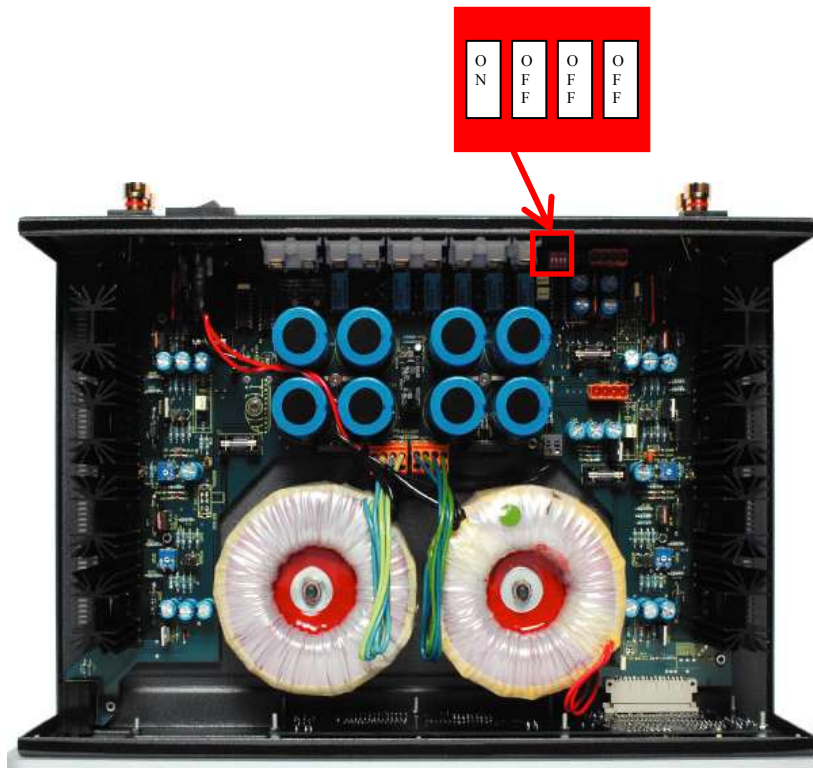

2- PLACE THE SPDIF BOARD IN THE ORANGE CONNECTORS ON THE MAIN BOARD (JUST ONE WAY POSSIBLE).

3- REMAIN : USE LEFT OR RIGHT (NEVER BOTH) AUX. INPUT.