

CONNECTING:


Rear of appliance:



- 1) Stereo output Left (L) and Right (R)
- 2) Aerial Input (75 Ω)
- 3) On/Off switch

DETAILS OF FUNCTIONS:

Front of appliance:

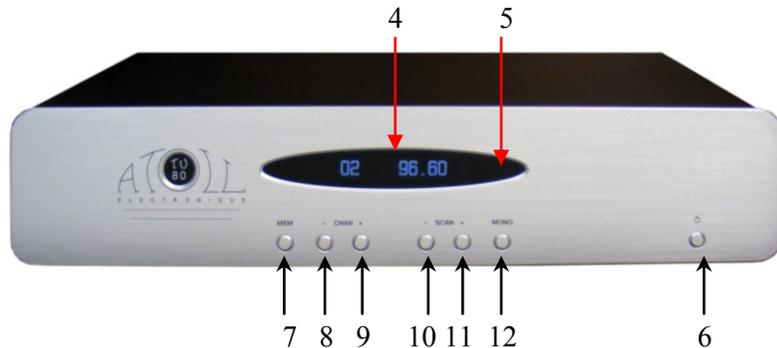

4) Display (see details below).

5) Stereo reception Led

6) Stand-by

7) Memory mode (see details below).

8) & 9) Previous & next channel in memory.


10) & 11) auto SCAN keys : with a short press you can scan the band by 0,5Mhz steps. A longer press starts the auto-SCAN. The SCAN will stop on every station found.

12) Mono or Stereo reception mode: On Stereo mode, light 5) appears.

ADVISES:

- To optimise the performances your Tuner, you should switch it on at least half an hour before any listening, the time for output stage to reach their ideal working temperature. Between two utilisation, it's better to use the stand-by position, so that the output stages remains at their optimal temperatures.
- We advise you to use good wires to link with the other elements. Don't hesitate to take advise from your dealer.

DISPLAY:

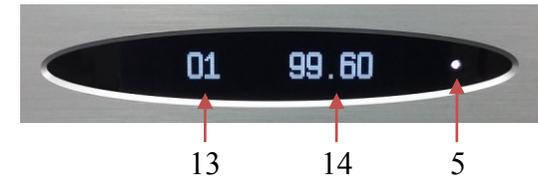

5) Stereo mode reception light. Activated by key MONO (12).

13) Memorized number of channel.

14) Stations frequency (or channel name: when RDS signal gives the information, shows the name of the station after few seconds.

Note: RDS signal can give only 8 characters.

MEMORIZATION OF CHANNEL:

Process of memorization is made with keys MEM, CHAN - & + of the front panel or from the remote control. You can memorized **20 channels**.

A- Place yourself on a frequency to program.

B- Press MEM : Number of channel twinkles.

C- Select the number of channel with keys CHAN - or +. Number of channel is incrementing automatically.

D- Press MEM to confirm.



Cancellation of a memorized channel:

Select the channel to cancel. Then press long the key MEM of the front panel. The channel is cancelled and « ERASED » appears on display.

It is also possible to cancel all the memorized channel. From your device on Stand-by mode, press long key MEM (7) of the front panel. « MEM CLR » appears on display. All memories are cancelled.

E.C. MARKING:

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE and national transpositions.

GUARANTEE:

The guarantee is **two years** long from date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliance which have been use correctly.

CLEANING:

Before any cleaning, switch off your CD player (3). Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing abrasive agent. Never try to clean up inside the appliance.

TECHNICAL FACTS	FM TUNER TU80SE
Power Supply:	19,6VA
Stand-by:	oui
Remote control:	en option
Number of program:	20
Signal/noise ratio:	58 dB (stéréo) 63dB (mono)
Distortion at 1kHz:	0,1 %
Intermodulation Sensitivity:	40dB μ V
Impedance of aerial to connect:	75 Ohms
Frequency response:	20 Hz - 20 kHz
Dimensions:	440x270x90mm
Weight:	5 kg

You have just bought a Tuner with exceptional audiophile performance. We really thank you for your confidence in our products. To get the best part of your Tuner, please read carefully this manual.

CAUTIONS:

- Put your Tuner in a dry and well ventilated place, far from source of heat;
- **Do not make any plug in when the Tuner is on;**
- Avoid any short-cut;
- Respect polarity + & - and switch left & right;
- Do not put your Tuner too close from a CD player because of disagreement in HF reception.

You will find enclosed:

- a Tuner FM ;
- a powerlead ;
- a modulation cable ;
- a FM aerial 75 Ω ;
- this manual with the certificate of guarantee.

OWNER'S MANUAL

FM TUNER

TU80SE



GUARANTEE – TU80SE

To present to your dealer with the invoice when returning back the appliance

ATOLL ELECTRONIQUE
Bd des Merisiers
50370 BRECEY
FRANCE

Dealer stamp

Date of purchase :

Place of purchase :

Buyer signature :

