


CONNECTING:

Rear view of CD Player:

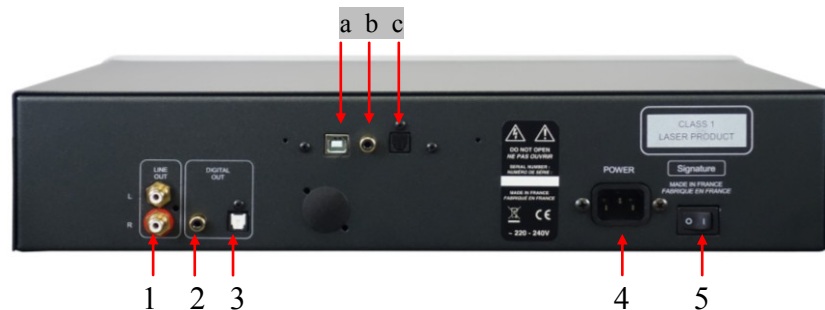

- | | |
|---|---------------------------------------|
| 1) Outputs left (L) and right (R) channel | 5) Power switch ON/OFF |
| 2) Coaxial output (to a converter D/A) | a) USB Input (optional) |
| 3) Optical output (to a converter D/A) | b) Digital Input (coax.) (optional) |
| 4) Power Input | c) Digital Input (optical) (optional) |

DETAILS OF FUNCTIONS:

Front of CD Player:



- | | |
|-------------------|---|
| 6) Disc tray | 10) Play & Pause |
| 7) Previous track | 11) Stop: <i>stop functions Play & Repeat</i> |
| 8) Next track | 12) Stand-by: <i>stand-by cancels all functions</i> |
| 9) Open/close | |

Selection of Digital Inputs (Optional):

To use the digital Inputs (digital and USB), place the CD player on Stand-by (12). Then you can select the Inputs with keys (7) & (8) of the front panel.

REMOTE CONTROL:

Keys 7 to 12 have the same functions as on the front panel.

13) TIME:

Displays running time of each track. With one press, display the remaining time of the track.

14) CD - DAC : selection of digital Inputs : COAX – OPT – USB with Left & Right keys.

15) Rear fast search key.

16) Forward fast search key.

17) A-B repeat: Allows to select a specific reading zone from point A to point B. While playing, press this key to start the beginning of the zone A, press a second time to select the end B. Selected zone will be played until you press again the AB key.

18) Repeat Mode (*This function is also available while reading the disc*)

Press on REP to choose the repeat mode:

- **R1** : makes a repetition of the same track. Confirm by pressing ENTER key. Display shows **R1** between the number and the time of the track.
 - **R** : makes a repetition of the complete disc. Confirm by pressing ENTER key. Display shows **R** between the number and the time of the track.
- STOP key (and keys 7) previous track & 8) next track on **R1** mode) cancels also all REPEAT modes.

19) PROGRAM (PROG): Press on PROG. Display shows on the Left the number of selected tracks (Nb 0) and on the Right the choice of tracks (Tr 1).

Choose the first track of the program with the selection keys 7) & 8). Confirm by pressing on PROG. Select all track needed for the program, using the same procedure.

Display shows number of tracks (on the Left), **P** symbol. The total time of the program is seen by a press on TIME. Press PLAY to start playing the program.


Press 2 times to cancel the program.

20) SHUFFLE: Press on SHUF. Display shows **S** between the number and the time of the track. Disc goes on play. All tracks will be played once in random mode. Press STOP to cancel the random play.

SHUFFLE and PROG menus are not available while reading the disc.

Combination: it is possible to combine a program with the REPEAT function (display shows **RP**) and SHUFFLE functions (display shows **RS**).

21) DISP.: Allows to switch Off the display.

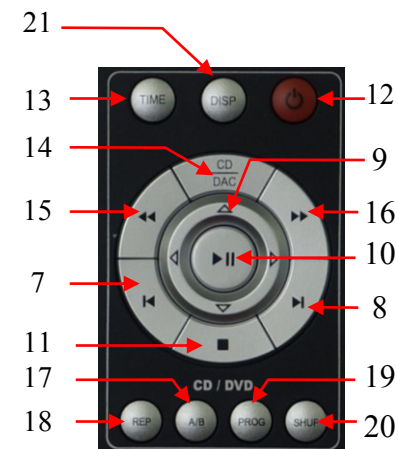

Text: some disc have a « CD Text » section (giving name of artist, name of tracks...). Those texts are automatically read at the beginning of each track.

E.C. MARKING:

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE and national transpositions.

GUARANTEE:

The guarantee is **two years** long from date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliance which have been use correctly.

CLEANING:

Before any cleaning, switch off your CD player (7). Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing abrasive agent. Never try to clean up inside the appliance.

TECHNICAL SPECIFICATIONS	CD PLAYERS
	CD200 Signature
Power supply :	30+30 VA
Total of capacitors :	17 000 µF
Output stages :	symetrical / discrete
Output level :	2,5 V _{RMS}
Output ImpedanceΩ:	220 Ω
Converter (D/A) :	24 Bit / 192 kHz
Digital Output :	Coaxial & optical
Digital Inputs converter	24 Bit / 192 kHz
USB Input converter	24 Bit / 96 kHz
Signal/Noise :	120 dB
Distorsion at 1kHz :	(< 0,002 %)
Frequency response :	(5–20 kHz)
Rising time :	1,5 µs
Dimensions (mm) :	440x280x90
Weight :	7,5 kg

Specifications are subject to modifications

ATOLL ELECTRONIQUE® is a French Company who conceive, manufacture and sales all its products.

You have just bought a CD player with exceptional audiophile performance. We really thank you for your confidence in our products. To get the best part of your CD player, please read carefully this manual.

CAUTIONS :

- Put your CD player in a dry and well ventilated place, far from source of heat;
- Do not put something on your CD player;
- **Do not make any plug in when the CD player is on;**
- Avoid any short-cut;
- Respect polarity + & - and switch left & right;
- Do not put your CD player too close from a Tuner because of disagreement in HF reception.

You will find enclosed:

- a CD player ;
- a remote control (with 2 batteries Lithium CR2025) ;
- a powerlead ;
- a modulation interconnect ;
- this manual with the certificate of guarantee.

OWNER'S MANUAL

CD PLAYER

CD200 Signature



GUARANTEE - CD PLAYER

To present to your dealer with the invoice when returning back the appliance.

ATOLL ELECTRONIQUE
Blvd des Merisiers
50370 BRECEY
FRANCE

Dealer stamp

Date of purchase :

Place of purchase :

Buyer signature :

ATOLL
ELECTRONIQUE