

CONNECTING



- 1) Coaxial output (to a converter D/A).
- 2) Optical output (to a converter D/A).
- 3) AES/EBU output (only for DR200).
- 4) Power input.
- 5) Power switch ON/OFF.

DETAILS OF FUNCTIONS



- 6) Disc tray.
- 7) Previous track.
- 8) Next track.
- 9) Open/close.
- 10) Pause & Play.
- 11) Stop: stop functions Play & Repeat.
- 12) Stand-by: stand-by cancels all functions.

REMOTE CONTROL

Keys 7 to 12 have the same functions as on the front panel.

13) TIME: Displays the running time of each track. With one press, display the remaining time of the track.

14) Inactive.

15) Rear fast search key.

16) Forward fast search key.

17) A-B repeat: allows to select a specific reading zone from point A to point B. While playing, press this key to start the beginning of zone **A**, press a second time to select the end **B**. Selected zone will be played until you press again the **AB** key.

18) REPEAT Mode (This function is also available while reading the disc)

Press on **REP** to choose the repeat mode:

- **R1**: makes a repetition of the same track. Confirm by pressing the **ENTER** key. The display shows **R1** between the number and the time of the track.
  - **R**: makes a repetition of the complete disc. Confirm by pressing the **ENTER** key. The display shows **R** between the number and the time of the track.
- STOP** key (and keys 7) previous track & 8) next track on **R1** mode) cancels also all **REPEAT** modes.


19) PROGRAM (PROG.):

- Press on **PROG**. The display shows on the Left the number of selected tracks (Nb 0) and on the Right the choice of tracks (Tr 1).
- Choose the first track of the program with the selection keys 7 & 8. Confirm by pressing on **PROG**. Select all tracks needed for the program, using the same procedure.
- The display shows the number of tracks (on the Left), **P** symbol. The total time of the program is seen by a press on **TIME**. Press **PLAY** to start playing the program.
- Press 2 times to cancel the program.

20) SHUFFLE: Press on **SHUF**. The display shows **S** between the number and the time of the track. The disc goes on the play. All tracks will be played once in random mode. Press **STOP** to cancel the random play. **SHUFFLE** and **PROG** menus are not available while reading the disc.

**Combination**: it is possible to combine a program with the **REPEAT** function (display shows **RP**) and **SHUFFLE** functions (display shows **RS**).

21) **DISP.**: allows to switch off the display.

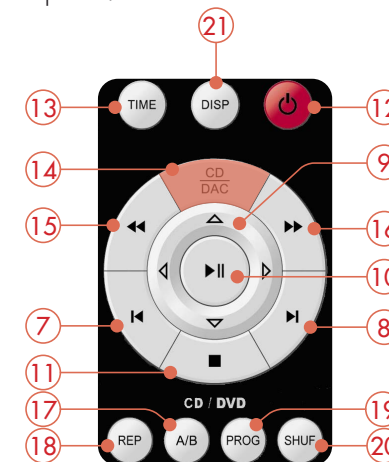

**Text:** Some disc have "CD Text" available (giving name of artist, name of tracks...). Those texts are automatically read at the beginning of each track.

### COMPATIBILITY

This player can play CD and CD-R discs. Type of formats played: MP3-WMA-AAC

### E.C. MARKING

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE and national transpositions.

### WARRANTY CONDITIONS

The guarantee is **two years** period from date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliance which have been use correctly.

### CLEANING

Before any cleaning, switch off your CD player. Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing abrasive agent. **Never try to clean up inside the appliance.**



### TECHNICAL DATA

	DR100 Sig	DR200 Sig
Power supply:	30 VA	30 VA
Total of capacitors:	14 142 $\mu$ F	22 100 $\mu$ F
Digital output level:	1V	1V
Outputs:	Coaxial-optical	Coaxial-optical-AES/EBU
Consumption:	Stand-by: 4 W ON: 5 W	Stand-by: 4 W ON: 5 W
Dimensions (mm):	440×280×95	440×284×95
Weight:	6 Kg	7 Kg

*Technical data are subject to modifications*



### CAUTIONS

- **Do not make any connections when your device is turned on.**
- Install your appliance in a dry, well ventilated place away from any source of heat.
- Make sure you never put anything on your CD player.
- Avoid any short circuit.
- In the event of a problem, never attempt to repair, disassemble, or rebuild the device, as this may cause severe electric shock.
- Avoid operating your CD player near a tuner as this may interfere with the HF reception of the latter.



### ADVISES

- To optimize the performance of your device, you should switch it on at least half an hour before any listening, the time for the output stages to reach its ideal working temperature.
- Your device will give you optimal listening quality after this time-lapse.
- Between two uses, it is, therefore, preferable to let the device in the standby position so that it remains at its optimum temperature.
- At night or when you leave your home, it is best to use the main switch to turn off the device.
- To optimize the sound quality of your system, we recommend that you choose good-quality connection cords. Do not hesitate to ask your specialist dealer for advice.

*You have just bought a CD player. with exceptional audiophile performance. We really thank you for your confidence in our products. To get the best part of your CD player, please read carefully this manual.*



YOU WILL FIND  
ENCLOSED

- A CD player.
- A remote control (with 2 batteries Lithium CR2025).
- A powerlead.
- This manual with the certificate of guarantee.

ATOLL ELECTRONIQUE®  
*is a French Company that designs, manufactures,  
and commercializes all its products.*





WARRANTY FORM ~ CD DRIVE MODEL

To present to your dealer with the invoice when returning back the appliance:

ATOLL ELECTRONIQUE®  
Bd des Merisiers  
50370 BRECEY  
FRANCE

Date of purchase:

Place of purchase:

Buyer signature:

Dealer Stamp

# OWNER'S MANUAL

## DR100 SIGNATURE DR200 SIGNATURE

CD - DRIVE



.....  
[www.atoll-electronique.com](http://www.atoll-electronique.com)  
.....