

## HOW TO CONNECT YOUR PHONO INPUT

Your Intergrated / preamp. is equipped with a phono stage MM (P50) or MM/MC (P100). To use it, you have to plug it on the Auxiliary Input.

The signal connection is made on the AUXILIARY input.

To avoid any parasite noise, you must link the ground of your Phono to the screw which is placed under the Auxiliary input (rear of appliance).

Rear view of appliance:



The selection of the Phono has to be made by the selector keys on the AUX. position.



**Warning :** Never plug in the AUX. Input any other kind of sources : CD player, Tuner, Tape...

## P100 MODULE SETTINGS

The P100 Phono module offers several setups directly on the board of the module. It is operated by the pair of 4 points DIL: one for the right channel, the other for the left channel. All setup are also written on the board of the module.

1) **MM – MC Setup:** depending of the type of your cartridge, you can select the Input as MM or MC as shown on the board below:

- For an MM cartridge, put **3** and **4** OFF.
- For a high level MC cartridge (MCH), put **3** ON, and **4** OFF.
- For a low level MC cartridge (MCL), put **3** and **4** ON.

3	4	TYPE
OFF	OFF	MM
ON	OFF	MCH
ON	ON	MCL

2) Input impedance choice:

- To select a 47 k resistor, put **1** ON.
- To select a 100 k resistor, put **1** OFF.
- To select a condensator of 100 pF, put **2** ON.
- To select no condensator, put **2** OFF.

1	2	
47 k	100 pF	ON
100 k	-	OFF



**IMPORTANT:** by default, the board has a setup for MM cartridges.