#### **CONNECTINGS**



- 1) Auxiliary input (optional phono or S/PDIF). 9) ON/SLEEP switch and general plug-in
- 2) CD. input.
- 3) Tuner input.
- 4) DVD input.
- 5) Tape input (PLAY).
- 6) Tape output (REC).
- 7) BY-PASS input.
- 8) Preamp. outputs (to 1 or 2 power amplifiers or to a Subwoofer).

- 9) ON/SLEEP switch and general plug-in (with protection fuse).
- 10) XLR input right channel.
- 11) XLR input left channel
- 12) USB input (B type): to connect to a computer with compatible software.
- 13) Right speaker output ( $\oplus$  &  $\ominus$ ).
- 14) Left speaker output (± & 🔾).

#### **DETAILS OF FUNCTIONS**



- 15) ON/SLEEP knob (by pushing); sources selection (by rotation).
- 16) Headphones jack: speakers Outputs are switched off when headphones are plugged in.
- 17) Display: shows the selected source (on the left) and volume level (on the right).
- 18) Power ON knob, volume and menus setup. Access to Balance (1 press) and Light (2 press). See "Remote control" chapter.

#### REMOTE CONTROL

The remote control is equipped with 2 Lithium CR2025 batteries. This remote control is also able to drive all other ATOLL products: CD players; Tuner; Integrated or preamplifier.

- 19) Allows to switch ON /SLEEP the display. (When the display is SLEEP, press any key to refresh the display for 3 seconds).
- **20)** Volume setup  $\bigcirc$  &  $\oplus$  (from 0 to 80).
- 21) Inputs selection.
- **22)** Direct access to sources; to activate/deactivate the BY-PASS Input, hold 3 seconds.
- 23) ON/SLEEP key: on stand-by, the appliance keeps all parameters unchanged (source, volume level, balance, color of the knobs backlight).
- **24)** MUTE key: to get off the Mute, press any active key of the remote control or turn a front knob.
- 25) Access to Menus:
- Balance (1 press): once on Balance menu, setup is operated with vol  $\ominus$  &  $\oplus$  keys. You can setup balance level from -9 to +9.
- Light (2 press): with this menu you can select the backlight color of the 2 front knobs of the front panel: Red, Blue, Purple or OFF.
- **26)** BY-PASS button: to activate / deactivate, hold 3 seconds.

#### USING OF THE BY-PASS INPUT



Warning: reduce the volume of the source connected to BY-PASS before any use of the BY-PASS Input.

The BY-PASS Input offers you the capacity to use your Integrated as a Power amplifier (plugged to an A/V processor for example). This Input can be selected from the front panel or with the BY-PASS key of the remote control (hold 3 seconds). Once selected, mention "BY-PASS" appears on display. Then, no other functions are available from the front panel or remote control. The Integrated can be used exactly as a Power Amp. Press once BY-PASS to get back from BY-PASS.

OWNER'S MANUAL ~ INTEGRATED

#### E.C. MARKING

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE, and national transpositions.

#### WARRANTY CONDITIONS

The guarantee is **two years** period from the date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliances that have been using correctly.

#### MAINTENANCE

Before any maintenance operation, unplug your appliance from the mains socket (9). A soft, dry cloth is sufficient for cleaning the apparel. Do not use any product that contains acetone, mineral spirits, ammonia, or abrasives.

Never try to clean the inside of the device.



## TECHNICAL DATA

Efficacy power Wrms/ch./ $8\Omega$  (230v): 160 W Efficacy power Wrms/ch./ $4\Omega$  (230v): 300 W Power supply: 1015 VA Total of capacitors: 93 400  $\mu$ F

Inputs: – 5 with 1 AUX (phono or S/PDIF)

1 XLR input

1 USB input (B type)PCM 24 bits/196 kHz.

Switch OFF consumption: 0 W

SLEEP power consumption (preheating): 32 W

ON consumption: 34 W - 800 W

Frequency response: 5 Hz - 100 kHz

Rising time:  $2.5 \,\mu s$ 

Dimensions:  $440 \times 370 \times 130 \text{mm}$ 

Weight: 20 Kg




## CAUTIONS

- Do not make any connections when your device is turned on.
- Always switch off your appliance before moving it or before any changes of wires on the rear.
- Install your appliance in a dry, well-ventilated place away from any source of heat.
- Make sure you never put anything on your amplifier.
- Avoid any short circuits.
- Carefully observe the polarity & and, as well as the left and right connection directions.
- Never connect two speakers in parallel to the same output.



- To optimize the performance of your device, you should switch it on at least half an hour before any listening, the time for the power stage to reach its ideal working temperature.
- Your device will give you optimal listening quality after this time-lapse.
- Between two uses, it is, therefore, preferable to let the device in the standby position so that it remains at its optimum temperature.
- At night or when you leave your home, it is best to use the main switch to turn off the device.
- To optimize the sound quality of your system, we recommend that you choose good-quality connection cords. Do not he sitate to ask your specialist dealer for advice.

You have just bought an Amp-Preamp. Integrated IN400SE with exceptional audiophile performances. We really thank you for your confidence in our products. To get the best part of your amplifier, please read carefully this manual.

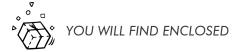

- An amp-preamp integrated IN400SE.
- A remote control.
- One power lead.
- This manual with the certificate of guarantee.

ATOLL ELECTRONIQUE® is a French Company that designs, manufactures, and commercializes all its products.



Page 2 ATOLL ELECTRONIQUE Page 7 ATOLL ELECTRONIQUE



### WARRANTY FORM ~ INTEGRATED IN400SE

To present to your dealer with the invoice when returning back the appliance:

ATOLL ELECTRONIQUE®

Bd des Merisiers

50370 BRECEY

FRANCE

Date of purchase:

Place of purchase:

Buyer signature:

Dealer Stamp

## **OWNER'S MANUAL**

# **IN400SE**

INTEGRATED AMP-PREAMP.



www.atoll-electronique.com