

INSTALLATION OF A WIRELESS BOARD

Before any operation unplug your amplifier

You'll find enclosed:


- 1 wireless board + cable
- 1 antenna
- 1 dongle

1- Pull off the plastic cap at the back of the device


If your amplifier does not have a plastic cap, you should use the hole placed above the AUX input. This hole must be enlarged to a diameter of 6mm. When drilling, do not leave deposits on the board.

2- Place the wireless board on the orange connectors:



OLD MODELS (not SE):

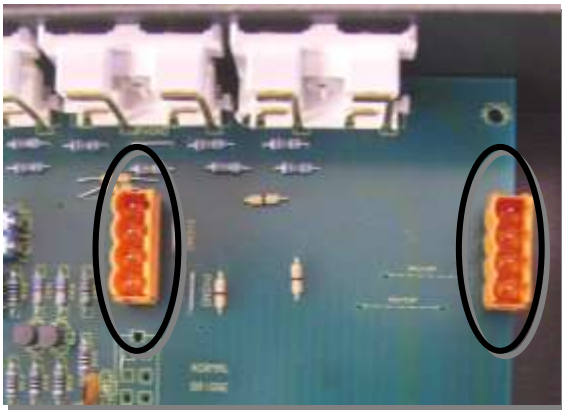

NEW MODELS (SE):

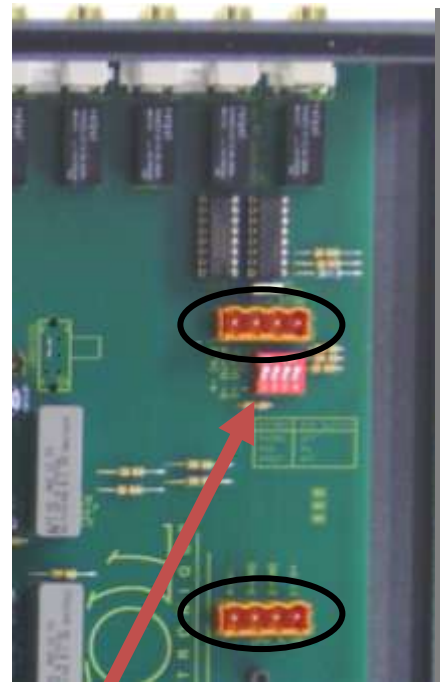

IN 200/PR300 (for those products you need a specific board)

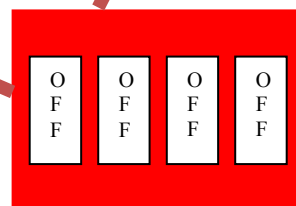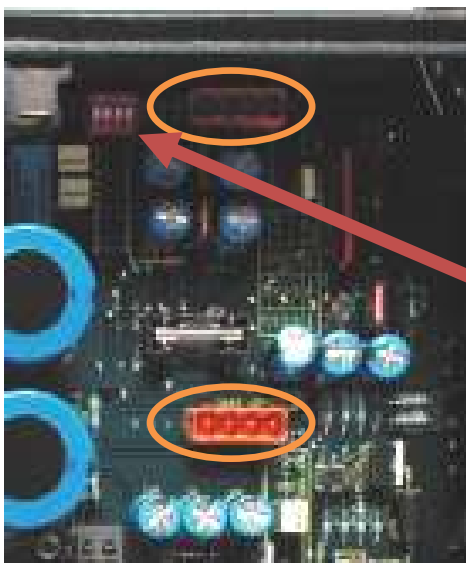

Put the 4 Switches off

3- Screw the antenna connector in the 6mm hole:



4- Screw the antenna at the back:



Screw the top of the cabinet.

Then the wireless board installation is completed.

The Wireless signal is on the AUX input. The RCA connectors of this input are no longer available.