


OWNER'S MANUAL

STREAMER

MS100

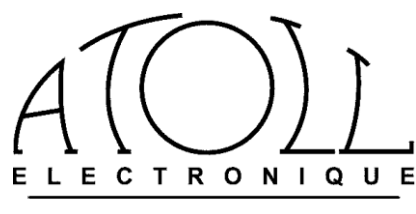

You have just bought a product with exceptional audiophile performances. We really thank you for your confidence in our products. To get the best part of your streamer, please read carefully this manual.

INDEX :

• Index, cautions & advises	p2
• 1 – General information and technical specs	p3
• 2 - Rear connecting, front panel functions, Wifi antenna connect	p4
• Remote control functions	p5
• 3 – uses: I – Preferences: start; network settings	p6
• Other preferences	p7
• II – Favorite menu	p8
• III – USB REAR / USB FRONT	p8
• IV – Media Server	p8
• V - Internet radio	p8
• 4 Apps.....	p9
• Network helps	p9
• Troubles & solutions	p10
• Warranty Certificate	p10

SAFETY INSTRUCTIONS:

- Install your device in a dry, properly ventilated and away from any source of heat.
- Make sure that you do not place never anything on your Streamer.
- **Do not make any connection when your device is powered.**
- Avoid short cuts.

USES ADVISES :

It is recommended to choose good quality cords to connect this appliance to the other devices. Feel free to take advices from your specialist dealer.

The following parts are included:

- a streamer;
- a power chord;
- a RCA chord;
- a remote control;
- an antenna;
- this manual with the certificate of guarantee.

1 – GENERAL INFORMATIONS

GENERAL INFORMATIONS AND ADVISES:

Your ATOLL Streamer is DLNA and UPnP compatible, it can run in a network with other devices. Take the time to read carefully the section « getting started » of this manual (page 6) before putting your unit under voltage. The display shows the selected radio station logo and has information about the files on the network and USB type sockets.

ACCEPTED FORMATS:

MP3 (8-48 kHz 16 bit)

AAC (24-96 kHz 16 bit)

AAC+ v1/HE-AAC

FLAC (44.1-96 kHz 16/24 bit)

FLAC 192 kHz/16-24 bit; only available on USB-A and with RJ45 link.

WAV (22-96 kHz 16/24 bit)

AIFF & ALAC

CLEANING:

Before any cleaning, switch off your appliance. Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing abrasive agent. Never try to clean up inside the appliance.

WARRANTEE:


The guarantee is **two years** long from date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it with your invoice. **The guarantee is only available for appliance which have been use correctly regarding this owner's manual.**

TECHNICAL FACTS

SPECS	MS100
Power Supply:	30VA
Total of capacitors:	6 200 µF
Audio Outputs:	1 stereo analog 2 digital (Coaxial & Optical)
Audio Inputs:	2 USB-A (24bits/192kHz)
Dynamic:	112 dB
Output Impedance:	100 Ohm
Output Level:	2 VRMS
Signal/Noise Ratio:	112 dB
Distortion at 1kHz:	0,005%
Bandwidth:	5Hz - 20kHz
Rising Time:	2 µs
Digital/analog Converter:	Burr-Brown 32 bits / 384 kHz
Dimensions:	320x230x83 mm
Weight:	3,2 Kg

CONNECTING:

Rear view of Appliance:

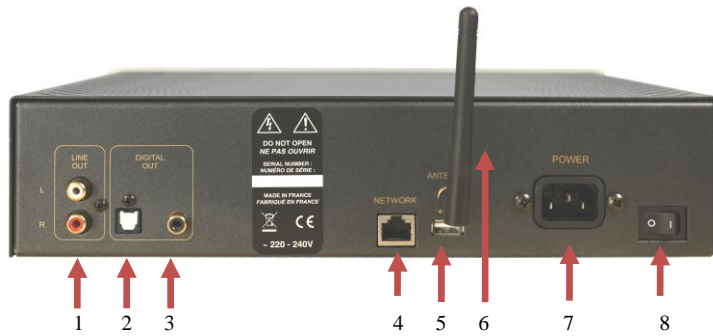

- | | | |
|-------------------------------|-----------------------|--|
| 1- Analog Outputs | Optical digital Input | 5- USB A type Input (Hard disk, USB key) |
| 2- Optical digital Output | Coaxial digital Input | 6- Wifi Antenna |
| 3- Coaxial digital Output | | 7- Power input |
| 4- Ethernet link Input (RJ45) | | 8- On/Off switch |

FUNCTIONS:

Front view of Appliance:



- | | |
|--|--|
| 9- General Display | 12- USB A type Input |
| 10- Remote control receiver | 13- Enter or, hold 2 seconds: Play/Pause |
| 11- Menus control keys
(by long press, next & previous) | 14- On/Off key & stand-by led indicator ⁽¹⁾ |

⁽¹⁾ 2 stand-by mode are possible:

Short Stand-by: with a short press on key 14, allows to switch off the display and all inputs. When you'll put you're the streamer ON, you'll conserve the selected source.

It is also possible to get over this stand-by directly from the iOS or Android apps by pressing the volume control key. Note that the volume control is not possible on this device.

Long Stand-by: with a longer press on key 21 (3 sec.), the stand-by cuts all functions

WIFI ANTENNA CONNECTING:

Make sure the good implementation of the Wi-Fi antenna prior to connection and any use. The antenna is packed with the remote control.

Please use the supplied antenna or a similar Wifi antenna with male connector.



REMOTE CONTROL:

Reminder of these keys on the front panel:

11- Navigation in the menu keys

13- OK: Enter or, hold 2 seconds: Play/Pause

14- Stand-by key

15- **Alphanumeric keys** Used to select track, or input numbers, letters and characters (from 0 to 9 and from A to Z)*

16- **Home:** to return to the source read

17- **Play / Pause & Enter key**

18- **Fast forwards key**

19- **Next track keys**

20- **Stop key**

21- **ADD FAV:** Key to put the selection in the "Favorites" menu. Press OK to validate and return to normal playback.

22- **REM FAV :** key to remove the 'Favorites' menu selection.

23- **DISP:** changes of display appearance

24- **Backwards through track**

25- **Previous track selection key BACK:** Key return back in menus.


26- **SHUF:** plays current list on random order

27- **REP:** repeat key

A- **IN/PR keys:** keys allowing to control the integrated and Preamps Atoll devices.

B- **CD keys:** keys allowing to control the CD players.

C- **DAC keys:** keys allowing to control ATOLL's DAC.

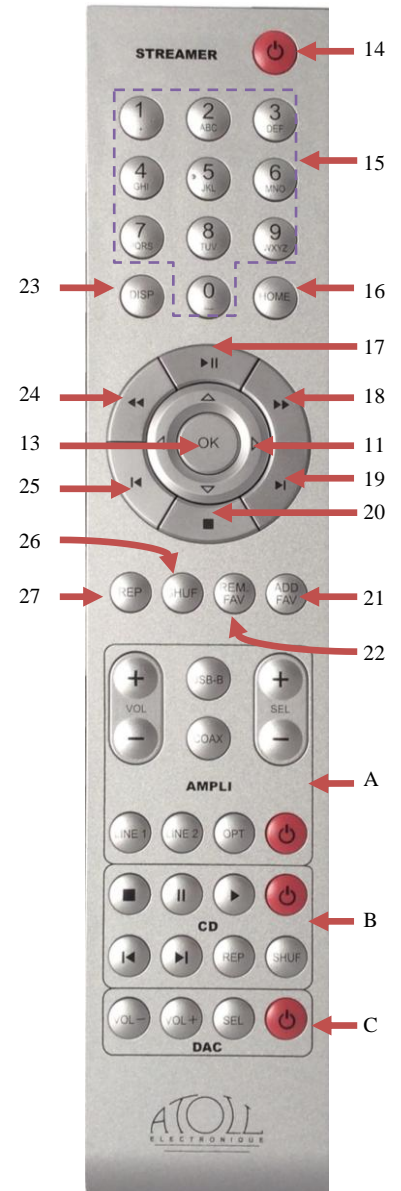

(*) By quick successive press on keys 2 for example, allows to scroll: a, b, c, 2, A, B, C

3 - USES

I - SETTINGS

Starting:

Before switching on your device, connect the cable network (type RJ45) to the connector (4). For reasons of stability of the network, the wired connection is preferred to Wifi binding when possible.

Press the standby key: the led (14) flashes about 8 seconds before the display appears. Wait for the first page on display before handling.

You can then use the buttons (11) forward navigation on your remote control or the front panel to access the menus.

When first plugging in your device (or in the case of changing network configurations), you must set up the connection between your Streamer and your network. Without this configuration, the operation of internet radios, or playback of the files present on your network will be inoperative.




Network settings:

Go in the 'Settings' menu and then on 'network'.

Select the menu « Network setup ».

Then you'll have to choose between « wired » or « wireless ».

1/ In the case of a wired connection, the display shows that the system will restart in cable mode. If it is not already, connect the network cable and then press OK. The unit will restart (wait several seconds).

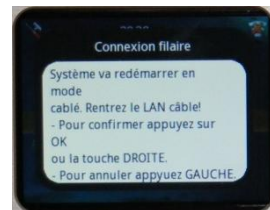

You can pass to automatic (DHCP) or even enter a static IP address.

2/ In the case of a "wireless" connection, the device will help you find available wireless networks. To do this, press "scan". All of the wireless networks available in your environment will be shown, Select the one corresponding to your.



RQ: in some environments (buildings), several networks can be present. Make sure you choose yours.

WPS key: Enter, in accordance with the capital letters and no spaces the security key WIFI which appears at the bottom of your internet emitter. In some cases it is required to set your emitter in association mode to secure the connection.

In the seconds that follow press 'Play' on your remote control or press and hold 2 seconds the Centre key on the keypad of the front panel of your Streamer The connection to the network only takes a few seconds and it remains in memory even when the Streamer or the emitter have been disconnected.



This symbol indicates the link wireless as well as the strength of the signal.

Network Information:

In the "network" menu, some information's are also available:

- 1/ Network info : gives you the name of the device, the connection SSID (name of the wireless LAN), DHCP status, corresponds to the network IP address and MAC address (ID physics of the streamer)
- 2/ Default UPnP Server: You can select or a default server. If the selection is 'no defect' chosen, all of the files on the network will be available. If one of the networks is selected, only the files on this server will be able to be read.
- 3/ Friendly Name: allows to give a name to the device (select Edit in the menu).



OTHER « SETTINGS »

In the 'Settings' menu you have access to several menus:

Time:

This menu allows you to set the time according to your geographic location.

You can select :

- 1/ Time Zone: Select your time zone according to your region
- 2/ Daylight Saving: allows to select daylight saving time (On or Off).
- 3/ Show Clock: This menu displays the date and time




User Interface:

This menu allows you to determine:

- 1/ Language: this device allows to choose between French, English or German.
- 2/ Theme: the theme matches the background image of the screen. You can choose the theme 1 (choice of the Atoll blue background) theme 2 (white writes black), or theme 3 (zoom effect).
- 3/ Display Timeout: Select the time after which the display will switch off. By default, the delay is off but you can select a period of 10, 30 sec. 1mn, 5mn, 15mn, 1h.

RQ: this choice allows only the switch off of the display. The functions of your device will be still active. To refresh the display, press one of the remote or the front panel navigation keys.

Playback:

- This menu determines the playback settings of all tracks you will read.
- Repeat: during the reading of a selection, you can choose: OFF (no repeat), ALL (symbol ) or ONE (symbol ).
- Shuffle: during the reading of a selection, you can choose: OFF, Songs or Albums (symbol )
- Slideshow: during the reading of a selection of photos, you can choose the speed of scrolling of thumbnails: OFF (the scroll will be made by pressing the keys back or next), 5-10-15 sec... (determines the time between each picture).

General

In this menu, you can have access to different information and settings including:

- Reset Settings: to find all the original settings. A reset setting causes a reboot of your machine.
RQ: if you choose to re-start, all menus will be in English.
- Software Update: use to update your device software.
- Info: gives general information about your device.
- Legal: gives an internet address where to find legal data about your device.

II - FAVORITES:

This device allows you to select your favorite music or internet radio of your choice. Select a track (present on the network or on any support connected to the front or rear USB inputs) or internet radio. Press the key on the remote control ADD FAV (21) to add it to the list of favorites.



RQ: If the network is not connected or if the source support is no longer connected, the track will not be able to be read.

To remove a track or radio to favorites, select it and then press the FAV REM (22).

III - USB REAR / USB FRONT:

Select one of these Inputs in order to be able to read the files on the connected media (USB keys, hard disk, MP3 player...). You can navigate within these brackets with buttons Right & Left (19) of the front panel or of the remote control.

IV - MEDIA SERVER:

This menu provides access to all of the files on the network. By selecting this menu, the list of the various sources of data appears. For all of them you can choose: music / photos / playlists

Music:

You can select music according to different criteria (according to the data indicated on the original files). The selection can be done according to:

All music / genre / all artists / artist collaboration / album artists / composers / albums / classification / music selection / folders

Photos:

You can select the photos according to different criteria (according to the data indicated on the original files). The selection can be done according to:

All photos / date of photos / albums / key words / classification / selection of images / files.

Selections:

This menu provides access to the selections.

In the media library menu, you can also find all the tracks played in chronological order by going to the "Recently played" menu.

V - INTERNET RADIO:

This menu allows you to access the menu of vTuner, or approximately 15000 internet radio stations.

In this menu you can set a selection of radio according to different criteria:


Country / recently read / search stations / location / genre / search podcasts / podcasts by location / podcasts by genre / new stations / most popular / get access code / reset Favorites

Search Menu:

Two menus allows to search directly by name (stations, podcasts).

You can directly enter the name of a station or a podcast using the alphanumeric keys on the remote control (22) or the navigation keys of the front panel(19).

When the name is shown, press the button (17) PLAY/PAUSE on the remote control or on the central navigation key of the front panel (13) for 2 seconds to validate and launch the search.

 This symbol means that the device is in playback mode.

5 - APP:

A free application for iPod Touch, iPad, iPhone, and Android is available to drive your Streamer named ATOLL HD. You can download it freely on line.


As a first step, make sure that your Smartphone is well connected in WIFI on the same network as your Streamer. In this case, your device will appear on the screen of your Smartphone just after starting the application, just select it.

The application will resume the data displayed on the screen the Streamer: logo of the radio station, audio, volume, etc. with the exception of the covers of albums and images.

You can navigate through the menus and adjust the analog volume level. You can set a maximum volume level by tapping twice on the 'volume' of the application area.

In the event the application does not work, simply start it to regain control.

Additional Apps:

There are other apps that can be run in association with your Streamer. For example Apple MusicFlow  (not free) allows to play the all the music you read from your Smart phone directly on your Streamer.

Broadcast media content using Windows Media Player streaming

You can stream the music streaming on the streamer from your computer, using Windows Media Player.

Step 1: connect the Streamer to your network

Connect your streamer to your home network using a wired connection or wireless.

Step 2: Windows Media settings

Windows Media Player 12 (Windows 7)

1. In Windows Media Player, click the menu **flow continuously**, and then select **Enable streaming media**.
2. On the page that appears, click **Enable streaming media**.

Write a name for your library of media files, and then click **OK**.

RQ : You can download the Windows Media Player on windows.microsoft.com/windows/downloads/windows-media-player.

Windows Media Player 11 (Windows Vista & XP)

1. In Windows Media Player, right-click on the library, and then click sharing of media files.
Click share my media files, and then click OK.
2. Windows Media Player looks for devices on your network. ATOLL STREAMER should appear with a green check mark.
3. If you want more options, click settings.


When you are finished, **click OK**.

Step 3 : read or display multimedia content

1. In the media streamer library menu, select the name of your computer.
2. Select the item you want to read or view.

TABLE OF PROBLEM SOLVING

TROUBLES	POSSIBLE SOLUTIONS
No sound.	<ul style="list-style-type: none"> - Check your RCA connections - Have you selected the correct source?
Impossible to access to the Network	<ul style="list-style-type: none"> - Enter the WAP key again. - Make sure that the antenna is the supplied template (male connector) and that it is well screwed on its base.
No recognition of the USB stick.	<ul style="list-style-type: none"> - Check if the format is compatible FAT32.
Frequent loss of the Wifi network.	<ul style="list-style-type: none"> - Make sure your box and your Streamer are not confined or too far apart. - Choose a wired connection or with Powerline adapters for example.
The device stops responding.	Turn off the power switch level before restarting.

 **WARRANTY – MS100**

to present to your dealer and to join with your purchase invoice when sending back the appliance to the Service Center or to the address below:

ATOLL ELECTRONIQUE®
Bd des Merisiers
50370 BRECEY

CONDITIONS DE GARANTIE :

This device was made to give you complete satisfaction.
Atoll electronics warranty is two years from the date of purchase of the equipment, date and stamp of the seller being authentic. We recommend you to keep your proof of purchase (invoice) with this coupon properly filled.
The warranty, as well as the terms of service should you be specified at the time of purchase by your dealer who will advise you, in case of faulty behavior or failure.
This warranty covers labor and replacement of parts acknowledged to be faulty and not their normal wear and tear caused by. Devices with traces of disassembly, drop, immersion, or abnormal voltage or any cause of degradation in the appliance and damage resulting from a use contrary to the indications included in the operating instructions, automatically lose the benefit of the guarantee.

Buying Date:

Address:

Buyer's Signature:

Dealer's Stamp

ATOLL Electronique® is a French brand that designs manufactures and markets all its products.